PD686 FM APPROVED & CSA CERTIFIED LOOP-POWERED METER
Intrinsic Safety Barrier Connections Diagrams (1155/I)

SECTION	AGENCY	DESCRIPTION
1.0		General Notes
2.0	FM/CSA	Conduit Installation Instructions
3.0	FM	Single & Dual Channel Positive Polarity Intrinsic Safety Barrier
4.0	CSA	Single & Dual Channel Instrinsic Safety Barrier Entity Installation

NOTE: FMRC AND CSA CONTROLLED DOCUMENT . NO CHANGES WITHOUT PRIOR FMRC AND CSA APPROVAL.

1.0 GENERAL NOTES

1.1 For Class II, Class III (Division 1 and 2) and NEMA/CSA type 4X installations, use conduit hub which is listed/certified for the environment in which the indicator is installed.

1.2 For Class II and III (Division 1 and 2) installations, field wiring must enter the enclosure through a listed/certified dust-tight conduit seal.

1.3 Control room equipment must not use or generate more than 250 VRMS or VDC.

1.4 US installations must be in accordance with ANSI/ISA RP12.6 “Installation of Intrinsically Safe Systems for Hazardous (Classified) Locations” and the National Electrical Code (ANSI/NFPA 70). Canadian installations must be in accordance with the Canadian Electrical Code, Part 1.

1.5 Hazardous location installation instructions for associated apparatus (barrier) must also be followed when installing this equipment.

1.6 For safe installation of a FMRC Approved/CSA Certified transmitter in series with PD686 loop indicator, the hazardous location installation instructions for the transmitter, PD686 loop indicator, and associated apparatus (barrier) must be compatible.

1.7 PD686 indicator does not add capacitance or inductance to loop under normal or fault conditions.

1.8 Substitution of components may impair hazardous location safety.


2.0 PD686 CONDUIT INSTALLATION INSTRUCTIONS

2.1 Remove the Display from the enclosure and connect 1/2" conduit fittings to the hole provided.


2.2 Use only UL/CSA listed or recognized conduit hubs that are specified to maintain NEMA 4X and Class II / Class III ratings.

2.3 Conduit hubs must be connected to the conduit prior to being connected to the enclosure.

2.4 Enclosure must be mounted using the mounting holes located in the base external to the equipment cavity.

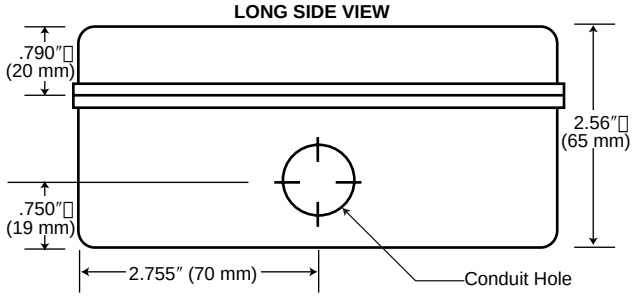

3.0 PD686 FM INSTALLATION WIRING DIAGRAM
Using single or dual channel intrinsic safety barrier

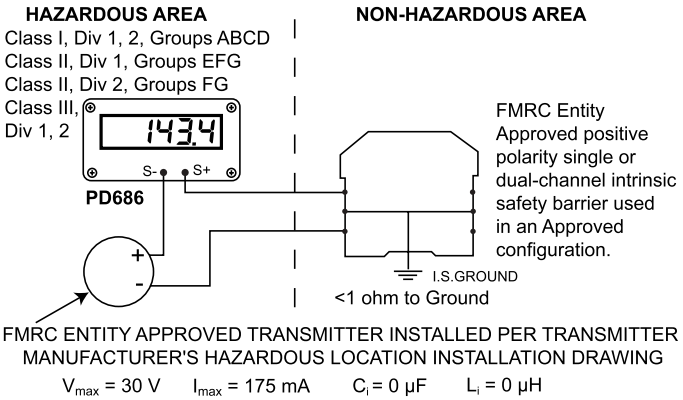

FMRC ENTITY APPROVED TRANSMITTER INSTALLED PER TRANSMITTER MANUFACTURER'S HAZARDOUS LOCATION INSTALLATION DRAWING

V_{max} = 30 V I_{max} = 175 mA C_i = 0 µF L_i = 0 µH

Application Notes:

3.1 $V_{max} > V_{oc}$ of single channel barrier or V_t of dual channel barrier


3.2 $I_{max} > I_{sc}$ of single channel barrier or I_t of dual channel barrier

3.3 L_i plus interconnecting wiring < L_a of single or dual channel barrier

3.4 C_i plus interconnecting wiring < C_a of single or dual channel barrier

3.5 It is not necessary to use intrinsic safety barriers when installing the PD686 in Class I,II,III, Division 2, Groups ABCDFG, maximum input voltage = 30 VDC.

4.0 PD686 CSA INSTALLATION WIRING DIAGRAM
Using single or dual channel intrinsic safety barrier-entity installation

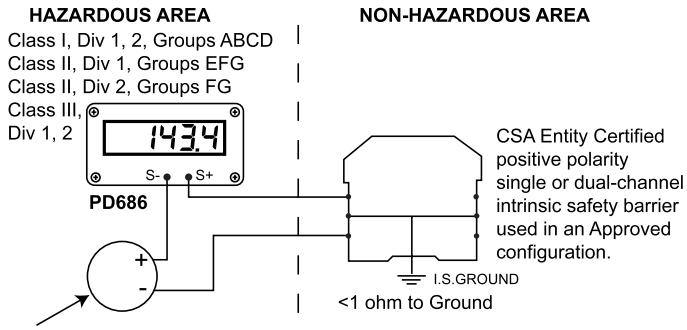

CSA ENTITY CERTIFIED TRANSMITTER INSTALLED PER TRANSMITTER MANUFACTURER'S HAZARDOUS LOCATION INSTALLATION DRAWING

PD686 ENTITY PARAMETERS

V_{max} = 30 V I_{max} = 175 mA C_i = 0 µF L_i = 0 µH

Application Notes:

4.1 V_{oc} , V_T ≤ Lowest V_{max} of I.S. equipment in the loop
I_{sc} , I_T ≤ Lowest I_{max} of I.S. equipment in the loop
C_a > C_i of the transmitter and C_{cable}
L_a > L_i of the transmitter and C_{cable}

4.2 For CSA Certification, barrier and transmitter must be CSA certified with Entity Parameters and must be connected per manufacturer's instructions.

4.3 It is not necessary to use intrinsic safety barriers when installing the PD686 in Class I,II,III, Division 2, Groups ABCDFG, maximum input voltage = 30 VDC.

LIM686-2 Rev B 02/02

PRECISION DIGITAL CORPORATION
19 Strathmore Road • Natick MA • 01760 • USA • Tel: (800) 343-1001 • Fax: (508) 655-8990
www.predig.com