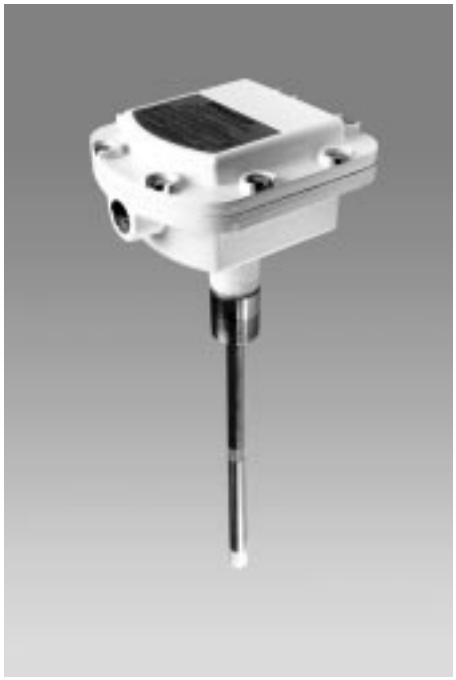
Price $5.00

BINMASTER

Taking Control . . .To A Higher Level

PRO X Series
CAPACITANCE PROBE



OPERATING INSTRUCTIONS
PLEASE READ CAREFULLY

BINMASTER
Division of Garner Industries
4200 North 48th Street - Lincoln, NE 68504
(402) 434-9102 Fax (402) 434-9133
www.binmaster.com

9250104.fm
REV. 2

TABLE OF CONTENTS

GENERAL SPECIFICATIONS 3

1.0 INTRODUCTION 4

2.0 APPLICATIONS 4

3.0 INSTALLATION 4

3.1 Location and Mounting 4

3.2 Conduit seals 4

3.3 Input Power and Field Wiring 5

3.4 Grounding 5

4.0 FAIL-SAFE SELECTION 6

4.1 Description 6

4.2 Fail-Safe High 6

4.3 Fail-Safe Low 6

5.0 CALIBRATION 7

5.1 Calibration Verification 7

5.2 Calibration Procedure 7

5.3 Sensitivity Selection 7

6.0 TIME DELAY 8

7.0 WARRANTY AND CUSTOMER SERVICE 8

FIGURE 1.1 9

FIGURE 1.2 10

FIGURE 1.3 11

FIGURE 1.4 12

FIGURE 2.1 13

BINMASTER

Taking Control . . .To A Higher Level

PRO X
GENERAL SPECIFICATIONS

Supply:	120/240 VAC 50/60 Hz
Supply Tolerance:	-15% +10%
Load:	5VA
Ambient Temperature: (Electronics)	-40° F to +185° F (-40° C to +85° C)
Sensitivity:	1 picofarad
Calibration:	Set when probe is uncovered: COARSE adjust; single turn potentiometer FINE adjust; single turn potentiometer
Probe Shield:	Automatically compensates for material buildup on the probe
Enclosure:	Type 4X, 5, 7, 9, 12; Explosion proof for Class 1 Group C & D; Class 2 Group E, F, & G
Conduit Entry:	3/4" NPT
Relay Output:	DPDT contacts; 10 Amps 250 VAC
Fail-Safe:	Switch selectable "High" or "Low" level modes
Time Delay:	Adjustable up to 10 seconds
Status Indicator:	Internal LED indicates material in contact with probe.

1.0 INTRODUCTION

The PRO X point level control operates on the change in capacitance principal and is capable of detecting the presence or absence of most granular or liquid materials. It is rated for Class 1 Groups C & D and Class 2 Groups E, F, & G hazardous locations. The PRO X includes a switch selectable Fail-Safe high/ low output relay with 10 Amp DPDT contacts, "Probe Shield" technology for ignoring material build up, and a "Quick Set" feature for easy calibration.

Upon installation the PRO X is set up with the probe uncovered. The "Quick Set" feature allows simple setup and calibration of the unit to achieve low, medium, or high sensitivity settings. The PRO X has an adjustable time delay on the relay output for monitoring covered or uncovered conditions.

2.0 APPLICATIONS

For applications in pressurized vessels up to 500 PSI, the PRO X should be mounted with the 3/4" stainless steel coupling.

Application temperatures for the various probes are:

1. Delrin Sleeved Stainless Steel:	250 Deg. F
2. Teflon Sleeved Stainless Steel:	500 Deg. F
3. Flush Mount (polyethylene):	180 Deg. F
4. Flush Mount (Teflon):	450 Deg. F

3.0 INSTALLATION

3.1 Location and Mounting

The probe should be located out of the direct flow of material. The PRO X with the Delrin or Teflon sleeved probe is designed to mount utilizing either a 1 1/4" NPT coupling or 3/4" NPT coupling. When the PRO X is used with the flush mount probe, the flush mount probe mounts directly to the vessel wall using a 7" diameter bolt circle. The PRO X with the insulated flexible extension probe is designed to be top mounted. Refer to Figures 1.1 through 1.4 for illustrations on installation, mounting options, and different probe combinations.

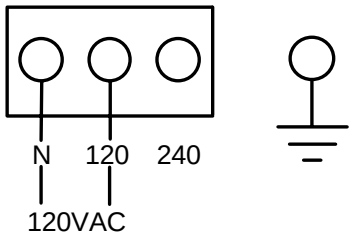
3.2 Conduit Seals

When the PRO X is installed in Class 1 hazardous locations, an approved conduit seal shall be installed within 18 inches of the conduit entrance. Consult local codes for other requirements for conduit seals.


3.3 Input Power and Field Wiring

The PRO X can be powered from either a 120 VAC or 240 VAC supply (see diagram below). Field wiring should conform to all national and local electrical codes and any other agency or authority having jurisdiction over the installation.

120 VAC SUPPLY



240 VAC SUPPLY

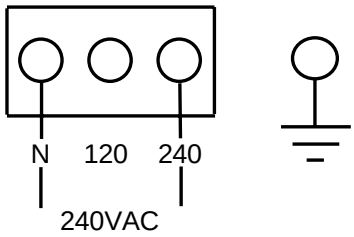

3.4 Grounding

An equipment grounding connection (earth ground) **must** be supplied to the unit for safety and to insure proper operation of the unit. This unit uses earth ground as a reference for calibration and detecting a covered or uncovered condition. Therefore, the vessel in which the PRO X is mounted must be made of metal, or a suitable metal ground plate must be installed where the PRO X is mounted.

4.0 FAIL-SAFE SELECTION

4.1 Description

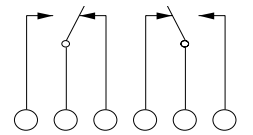
A Fail-Safe condition means that the relay contact positions are set up so that in the event of a power failure the relay will be de-energized and the contacts will indicate a condition that is deemed safe for the application. (Refer to FIGURE 2.1 for the location of the Fail-Safe selection switch.)

4.2 Fail-Safe High


Fail-Safe High means that the relay will be energized when the probe is uncovered and will de-energize when the probe is covered. In this mode, a power failure will cause the relay contacts to indicate that the probe is covered whether it is or not.

FAIL-SAFE HIGH RELAY CONTACT POSITION

UNCOVERED



COVERED

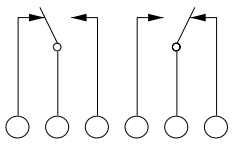


4.3 Fail-Safe Low


Fail-Safe Low means that the relay will be de-energized when the probe is uncovered and will energize when the probe is covered. In this mode, a power failure will cause the relay contacts to indicate that the probe is uncovered whether it is or not.

FAIL-SAFE LOW RELAY CONTACT POSITION

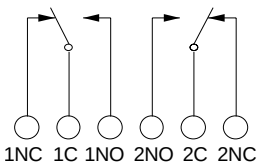UNCOVERED



COVERED

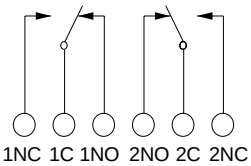

5.0 CALIBRATION

The PRO X Quick Set calibration uses two single turn potentiometers making calibration very simple. One potentiometer labeled COARSE is used to compensate for the capacitance of the empty vessel. The other potentiometer labeled FINE is used to set in the desired sensitivity. Refer to FIGURE 2.1 for the location of these potentiometers on the printed circuit board. A tool for adjusting the COARSE and FINE potentiometers is provided inside the top cover of the PRO X. The cover has a convenient clip for storing the tool so it will always be available.

NOTE: Accurate calibration requires that the appropriate probe is attached to the PRO X and the unit installed in the vessel. The probe must be UNCOVERED and material well below it.

5.1 Calibration Verification

Following calibration adjustment, the sensitivity setting that you have selected should be checked by verifying that the PRO X senses a covered probe condition with your material.

5.2 Calibration Procedure

1. Turn both the COARSE and FINE potentiometers fully counter clockwise (CCW). The internal COVERED indicator light should be OFF.

2. Turn the COARSE potentiometer slowly clockwise (CW) to the point where the COVERED indicator light just turns ON and stays on.

3. Turn the FINE potentiometer slowly clockwise (CW) until the COVERED indicator light just turns OFF. (If the COARSE potentiometer has been carefully adjusted, this should occur when the FINE potentiometer is between the 8 and 10 O'clock position.) Now continue to turn the FINE potentiometer clockwise (CW) to the desired sensitivity setting.

HIGH sensitivity:	1/16 to 1/8 turn (1 to 3 picofarad)
MEDIUM sensitivity:	1/8 to 1/4 turn (3 to 6 picofarad)
LOW sensitivity:	1/4 to 1/2 turn (6 to 12 picofarad)

Bin Master offers a toll-free Customer Service phone number (**1-800-278-4241**. You may call the costomer Service department for technical and application assistance Monday through Friday from 8:00 AM to 5:00 PM Central Time. International customers call us at **(402) 434-9102** or reach us via fax at **(402) 434-9133.**

NOTE: It may be convenient to think of the FINE potentiometer as a clock face where the distance between consecutive hour numbers represent a change in sensitivity of approximately 2 picofarad. Thus turning the FINE potentiometer clockwise one hour position past the point at which the COVERED indicator just turns OFF would provide a sensitivity of approximately 2 picofarad. Two-hour positions past that point would provide approximately 4 picofarad sensitivity, etc.

5.3 Sensitivity Selection

Sensitivity Setting (typical)	**Dielectric Constant of Material** (not the same as picofarad)
HIGH sensitivity:	4 or less
MEDIUM sensitivity:	4 to 10
LOW sensitivity:	10 or higher

6.0 TIME DELAY

The PRO X has an adjustable time delay of up to 10 seconds. This is a time delay for the output to change states from an uncovered to a covered condition and from a covered to an uncovered condition. This time delay affects the relay contacts only. The internal LED (DS1) will immediately respond to a change in covered or uncovered condition regardless of the time delay setting.

Minimum time delay is when the DELAY potentiometer is set fully counter-clockwise. (Refer to FIGURE 2.1 for the location of the DELAY potentiometer.) Maximum time delay is with the DELAY potentiometer set fully clockwise.

A tool for adjusting the TIME DELAY potentiometer is provided inside the top cover of the PRO X. The cover has a convenient clip for storing the tool so it will always be available.

7.0 WARRANTY AND CUSTOMER SERVICE

7.1 Limited Warranty

The manufacturer warrants this equipment for two (2) years according to the following terms:

1.) This warranty extends to the original purchaser only and commences on the date of original purchase. The original purchaser must mail to the manufacturer the "Warranty Registration" card to confirm the equipment purchase. Failure to do so may void the warranty.

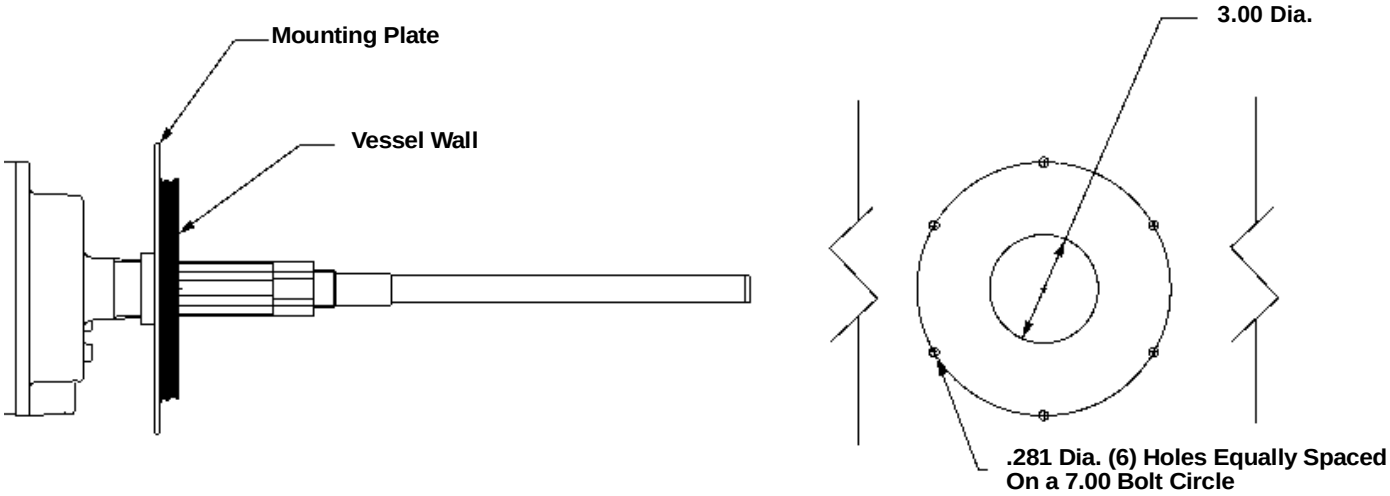
2.) The manufacturer will repair or replace any part of this equipment found to be defective, provided such part is delivered prepaid, to the factory. Manufacturer's obligation is limited to the cost of material and labor to repair or replace and does not include transportation expenses.

3.) This warranty shall not apply to any product that has, in our judgment, been tampered with, altered, subject to misuse, neglect or accident. In addition, the warranty does not extend to repairs made necessary by normal wear.

4.) This warranty is in lieu of all other warranties, expressed or implied.


7.2 Customer Service

9



Standard Mounting Plate

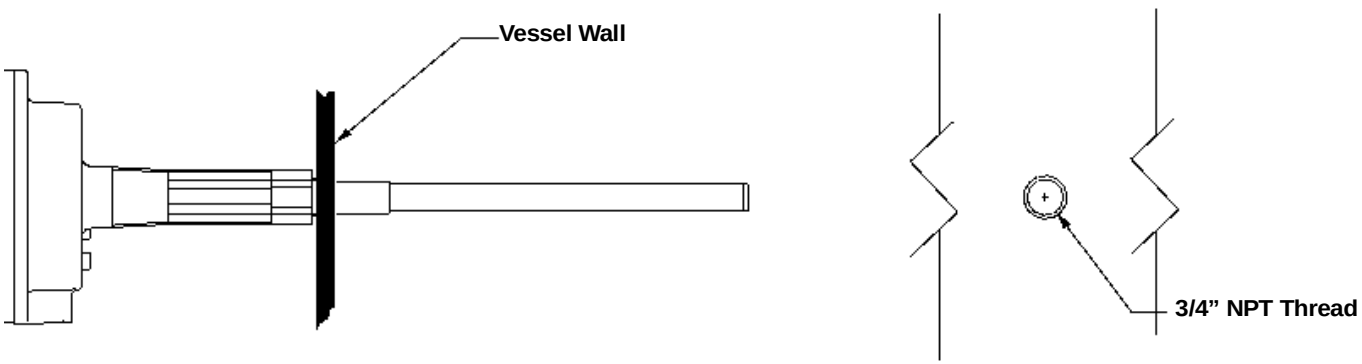Mounting Hole Pattern
In Vessel Wall




Explosion Proof
High Pressure Coupling

Mounting Hole
In Vessel Wall

9270061.dgn
927a061.tif

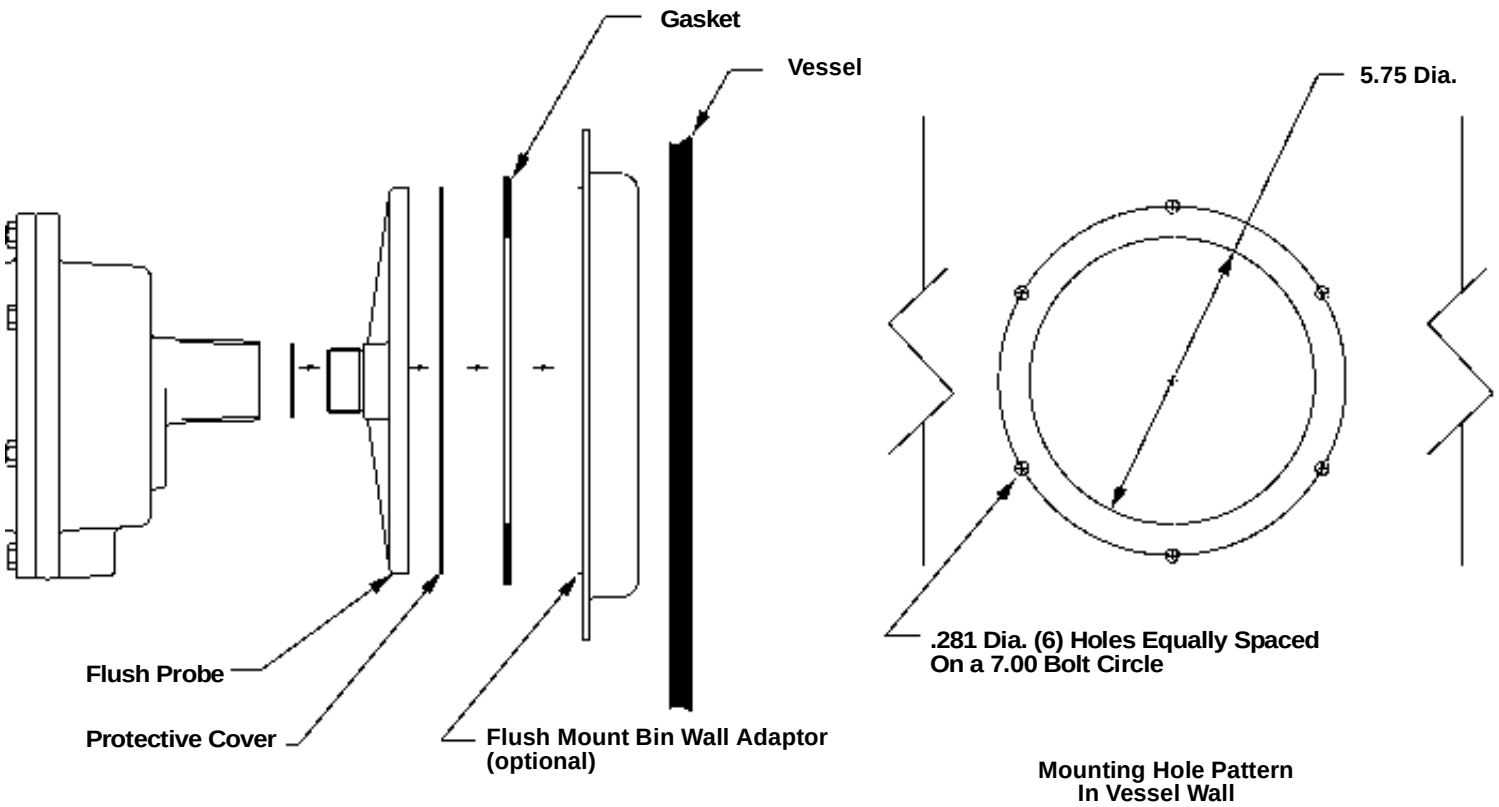Figure 1.1



Flush Mount Probe

9270061.dgn
927b061.tif

Figure 1.2


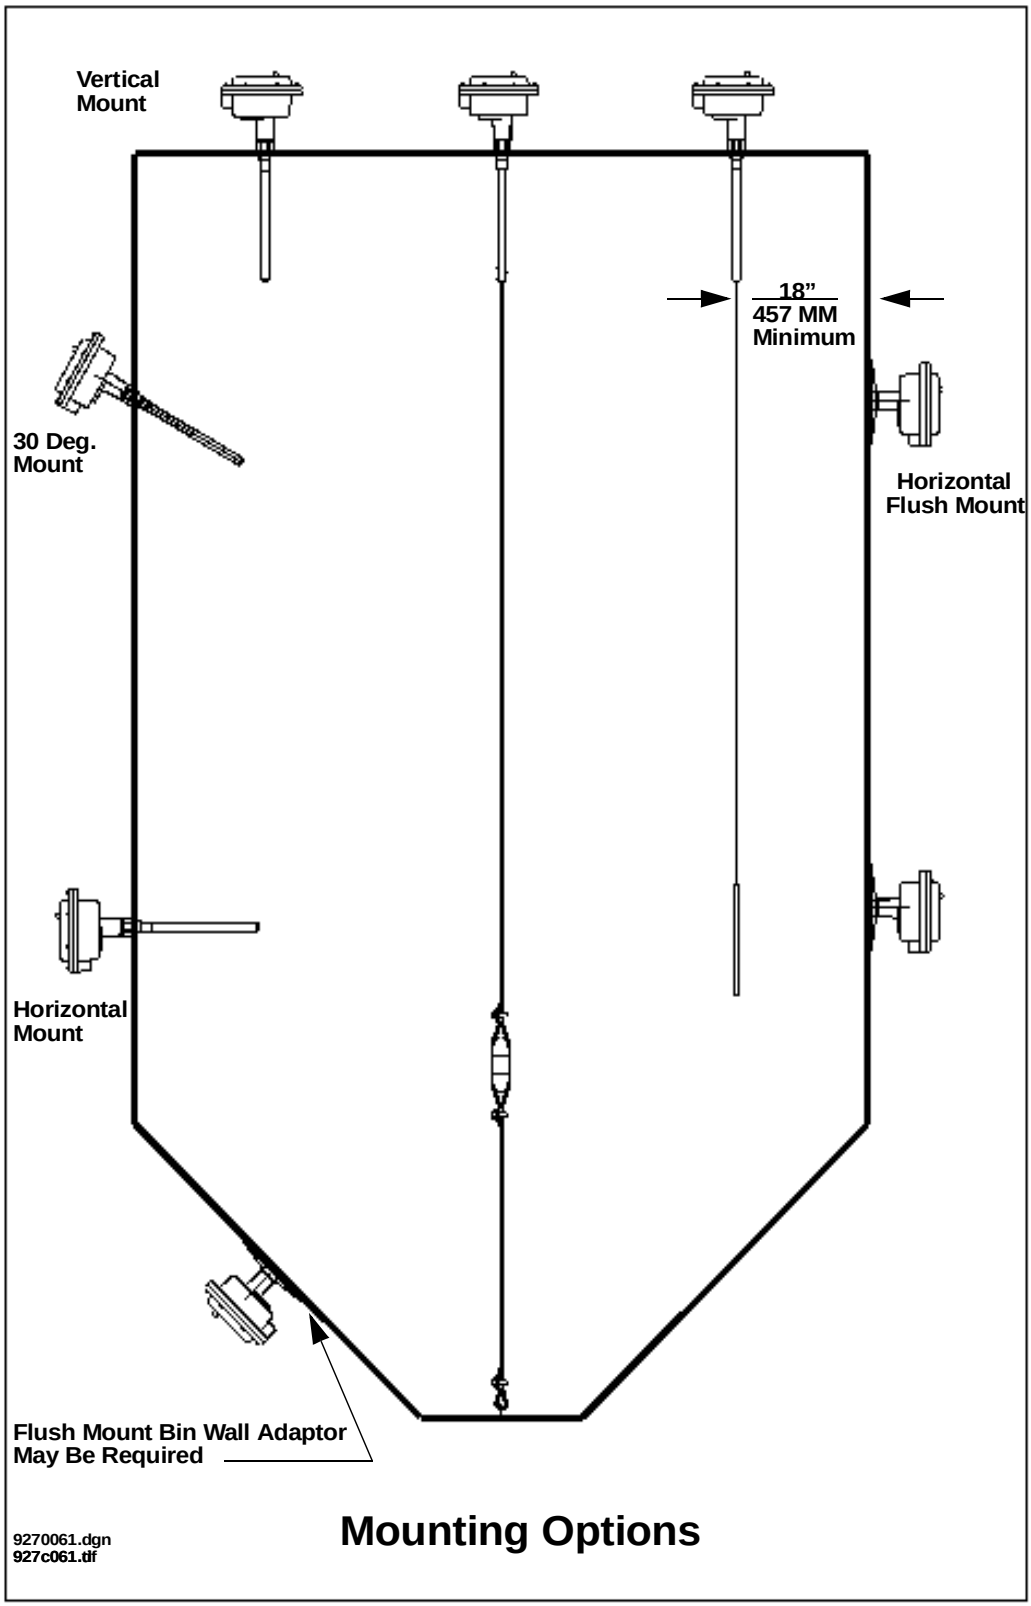

Vertical
Mount
18”
457 MM
Minimum
30 Deg.
Mount
Horizontal
Flush Mount
Horizontal
Mount
Flush Mount Bin Wall Adaptor
May Be Required
9270061.dgn
927c061.tif
Mounting Options

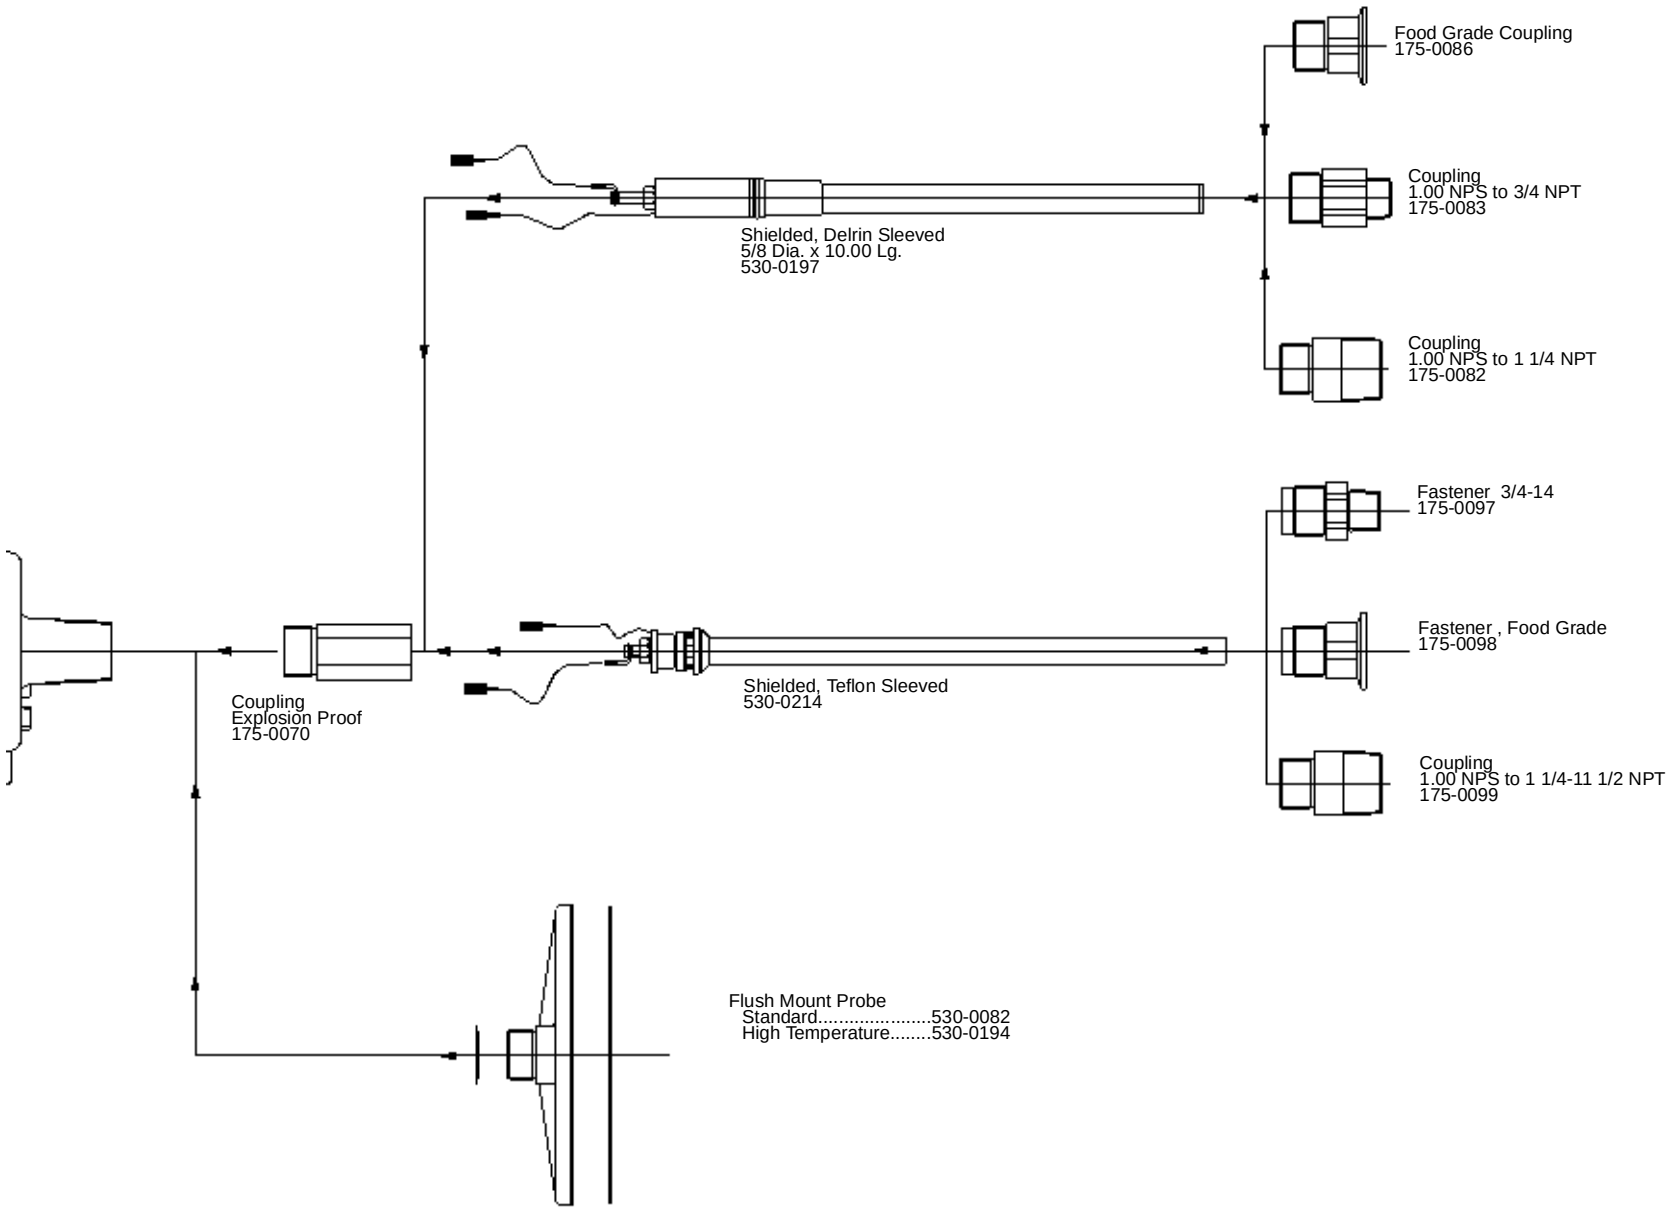Figure 1.3



Pro X Probe Combinations

Figure 1.4

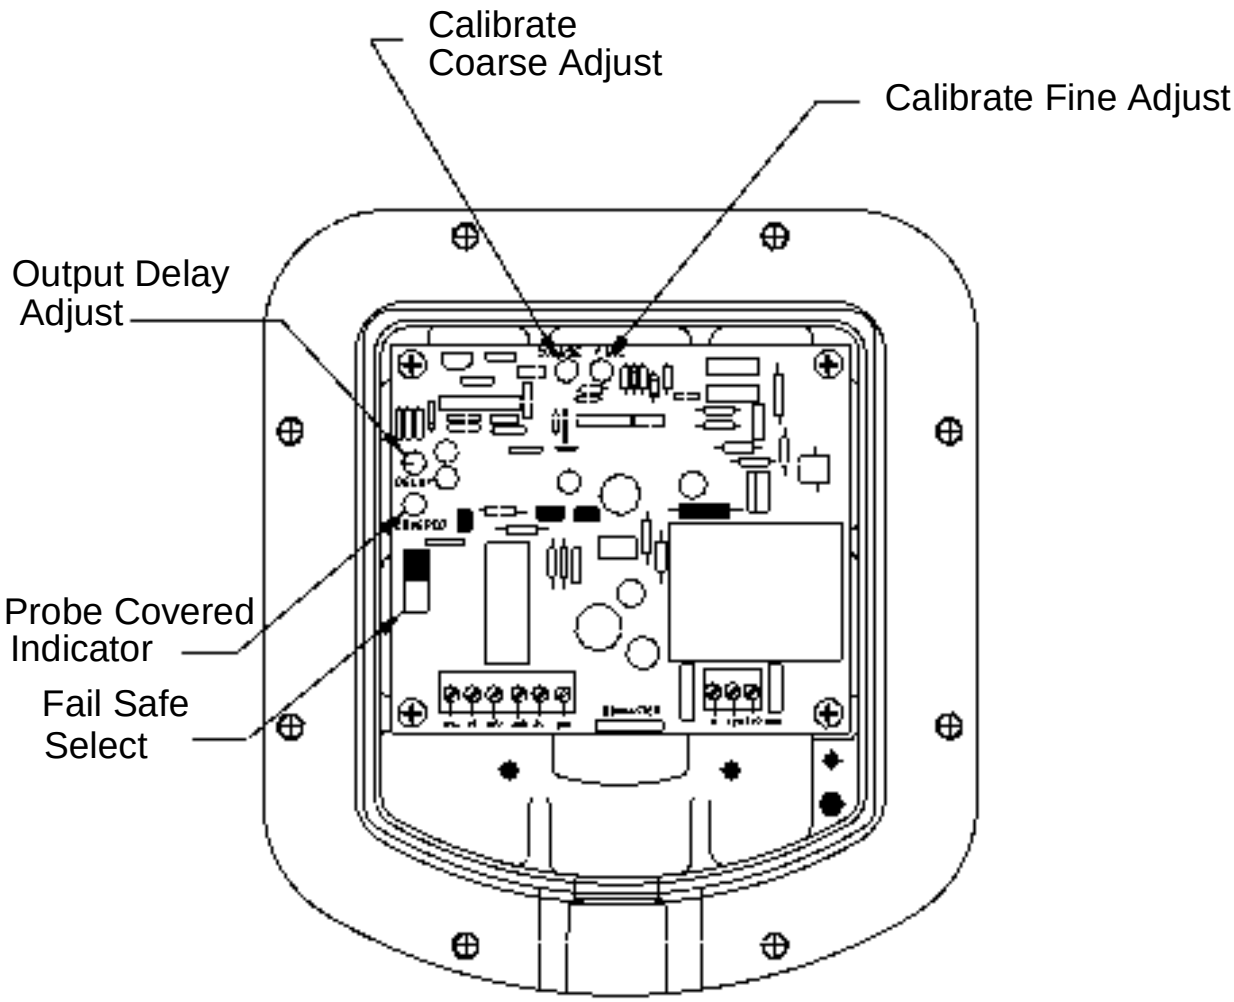


Figure 2.1

9270061.dgn
927e061.tif